

1. Press Menu button on the remote control



2. Enter PIN if requested. Default 0000



3. Using up and down buttons, move to the satellite and then press the "Green" button to list the transponders.



4. Press the "Yellow" button to enter the transponder edit/add/delete window. Move to Mode and use left and right arrow keys to select "Add".



5. Move down to "Frequency" and enter the frequency.



6. Move down to "Symbol Rate" and enter the symbol rate.



7. Move down to "Polarity" and use the left and right arrow buttons to select the polarity. Press OK to save.



8. The transponder added will be shown in the list on the left. You may add or edit more transponders. The next step is to Scan the transponder for channels.

