

1. Press Menu button on the remote control



2. Enter PIN if requested. Default 0000



3. Press "Yellow" button. Change mode to "Add" using right and left arrow buttons. Move down to Satellite and press OK button.



4. Use the arrow and OK buttons to enter the name of the satellite. Press "Red" button to save the name.



5. Move down to "Degree" and enter the location of the satellite. Press OK to Save.



6. Press right arrow to move to the panel on the right. Use the up and down arrow to move to each option and press OK to view allowable settings.



7. You can choose the LNB frequency from the list or select the 00000 option and enter the frequency.



8. The satellite is now created with the settings you specified. The next step is to set up the transponders.

