


Remote Control Unit

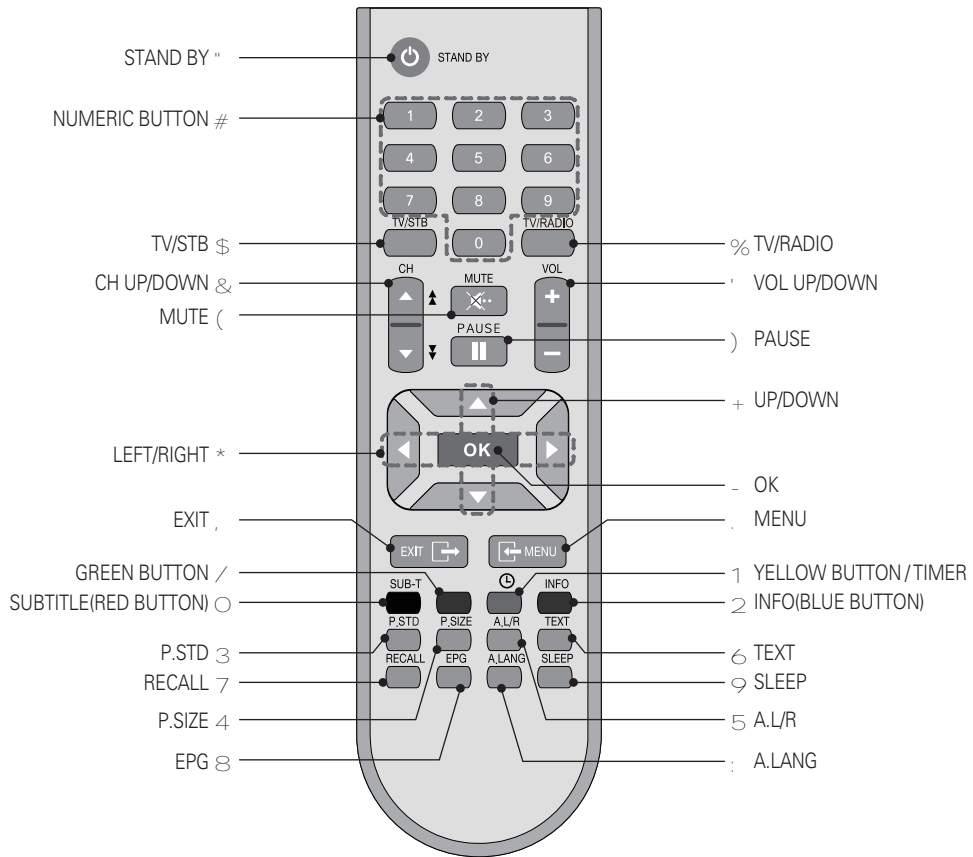

Note! 1 : When inserting batteries, make sure that the polarity (+/-) is correct.

Note! 2 : The design of the Remote Control Unit may be changed without any notice in advance.

Remote Control Unit

"	STAND BY	To switch between operation and stand by mode.
#	NUMERIC BUTTONS	To select the channel and enter the channel edit and PIN code.
\$	TV/STB	To switch between TV and STB receive mode.
%	TV/RADIO	To switch between TV and Radio.
&	CHANNEL UP/DOWN	To change channel up and down.
'	VOLUME UP/DOWN	To increase or decrease the volume.
(MUTE	To enable or disable audio.
)	PAUSE	To pause or play video.
*	LEFT/RIGHT	To move left or right on the menu. To increase or decrease the volume.
+	UP/DOWN	To move up or down on the menu.
,	EXIT	To return the normal viewing mode from a menu.
-	OK	To confirm your choice.
.	MENU	To display the Main Menu on the screen or return to the previous menu.
/	GREEN	To see the current information banner guide or the satellite list.
0	SUBTITLE(RED)	To enable or disable subtitle or change the channel list mode.
1	YELLOW	To sort channel list.
2	INFO(BLUE)	To display the information box on the screen.
3	RSTD	To change picture standard. (Option)
4	RSIZE	To change screen size.
5	A.L/R	To select the sound mode.(Mono, Left, Right, Stereo) To display the reserved list. (Option)
6	TEXT	To see the teletext by OSD. (Option)
7	RECALL	To return to the previous channel.
8	EPG	To display the TV/RADIO program guide.
9	SLEEP	To select a present time interval for automatic shut off.
:	A/LANG	To select the audio language.